

Compact Flash Cartridge

This document describes precautions and procedures associated with CTC's compact flash cartridges (model numbers FLH-2004 and FLH-2010).

Before you begin, turn off the power to the PowerStation. The compact flash cartridge and the PowerStation may be damaged if the cartridge is removed or inserted with the power on.

Important You must turn off your PowerStation before removing or inserting the compact flash cartridge.

Inserting A New Flash Cartridge

Insert the new flash cartridge into your PowerStation by sliding it into the PCMCIA slot (on the left side of the unit if viewed from the front). Push the cartridge gently into the slot until it comes to a stop.

Note Compact flash cartridges will only fit into the slot in the correct position, so if the card will not go into the slot, turn it over, and try again.

The picture below shows the correct orientation and location for inserting the compact flash cartridge.



Storing old Flash Cartridges

Always store unused compact flash cartridges in the supplied case in a cool, dry, static-free place. Proper storage will assure that you can use the flash cartridge to its full potential.