

Industrial Monitor Mounting Cover

Installation Instructions

These instructions explain how to fasten the Monitor Mounting Cover (model # COV-5000 or COV-5015) onto the Industrial Monitor. Monitor Mounting Covers are available for 12” and 15” monitors only.

Attaching the cover to the monitor will enable you to mount the monitor on an adjustable mounting arm, while still providing easy access to the monitor’s power switch and on-screen display (OSD) controls. The cover is shipped with the screws that you will need to fasten the cover to the monitor.

Note The Monitor Mounting Cover supports a 100mm VESA standard mounting pattern.


The dimensions of the Monitor Mounting Cover are shown below.

Monitor Size	Mounting Cover Dimensions (H x W x D)
12.1”	12.1” (307.34mm) x 15.1” (383.54mm) x 4.0” (102mm)
15.1”	13.3” (337.82mm) x 16.8” (426.72mm) x 4.2” (107mm)


To install the Monitor Mounting Cover on the monitor, follow these steps:

1. Make sure that the monitor’s Power switch is off (in the “down” position).
2. Attach the following cables to the monitor. The connections are shown in the illustration below. Be sure to screw each cable securely into its connector.

Industrial Monitor Mounting Cover Installation Instructions

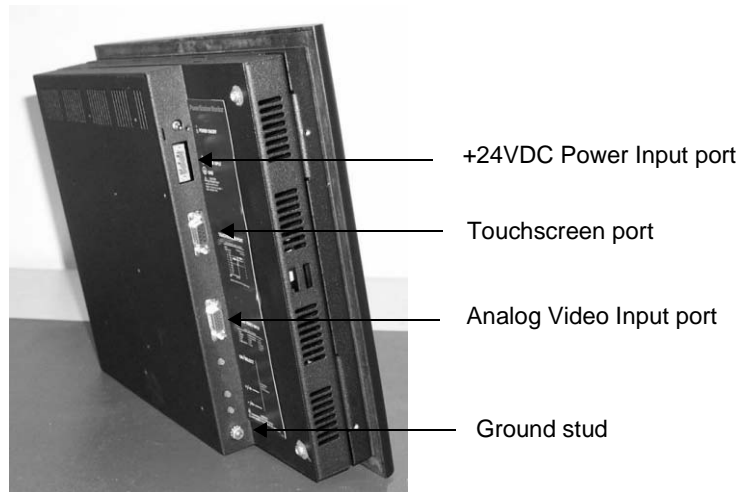

- Connect the power cord to the Power Input port.
- Important** In order to obtain Underwriters Laboratories approval for your monitor installation, an Industrial Monitor with Mounting Cover must use a limited energy power source, such as CTC's External AC Power Supply Adapter (PWR-PSAC).
- If you have a touchscreen monitor, connect the 9-pin touchscreen cable to the Touchscreen port.
 - Connect the 15-pin video cable to the Analog Video Input port.
3. Connect the ground stud at the lower left side of the monitor to an effective, known earth ground.
 4. Slide the Monitor Mounting Cover onto the back of the monitor. The vents on the cover should be at the top of the monitor back.

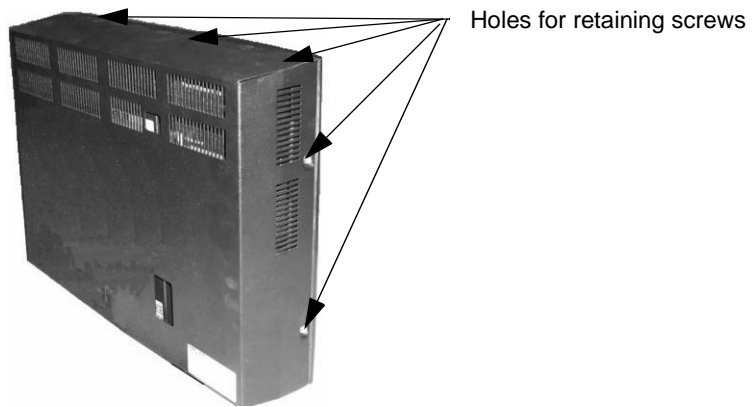

5. Fasten the cover to the monitor with the 7 retaining screws included in the installation kit. Three screws will fasten across the top of the cover and two on each side.

Your Industrial Monitor is now ready to be mounted on an adjustable arm. For instructions on how to accomplish this, see the mounting instructions that accompany the arm.

Important To ensure that your Industrial Monitor remains securely fastened to its adjustable arm, attach it to the arm using the four 8-32 x 1/4" screws shipped with the Monitor Mounting Cover.

